


USE WEDGES OR NAILING FINN TO MAKE THE WINDOW LEVEL AND SQUARE. APPLYING EXPANDABLE FOAM ADHESIVE AROUND PERIMETER SECURES THE WINDOW AND ACTS AS AN AIR AND VAPOUR SEALANT.

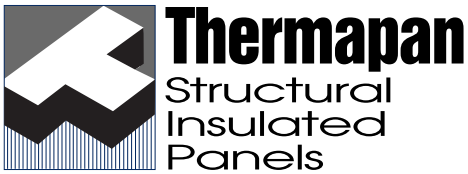

www.thermapan.com
1-877-443-WALL (9255)

TITLE		PROJECT	
WINDOW INSTALLATION ©			
REFERENCE	SCALE		
8020	AS NOTED		
DATE	REVISION	DWG. No.	
NOV. 1998	1	W7-G	